

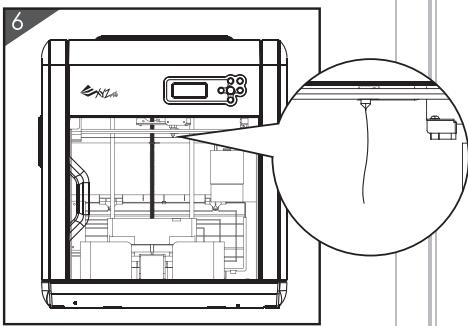
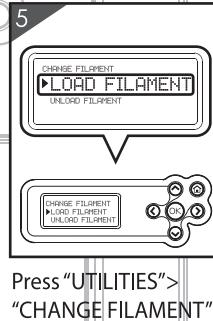
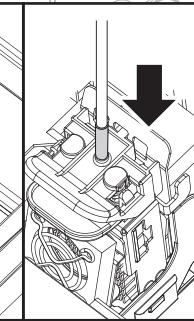
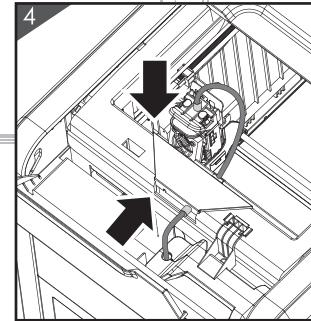
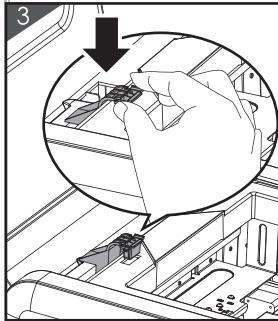
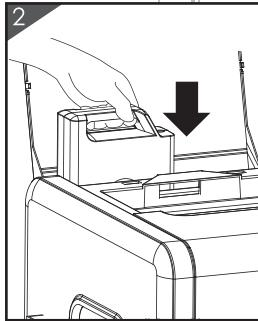
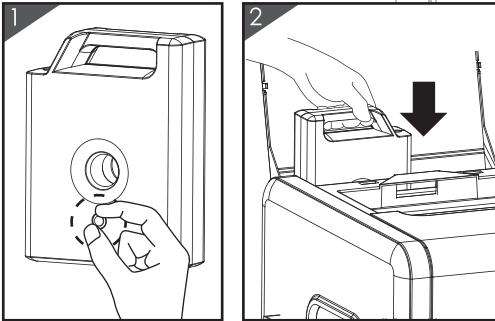
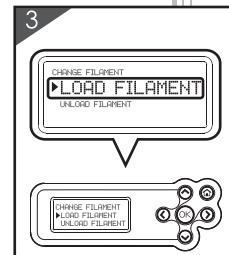


How to load filament into printer

Load Filament

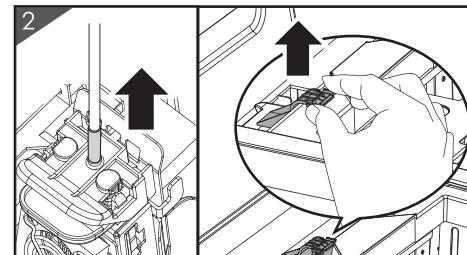

Unload Filament

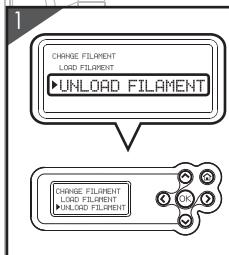

Notice:

Do Not place the filament under humid or dusty place
Do Not dismantle or remodel the filament

